


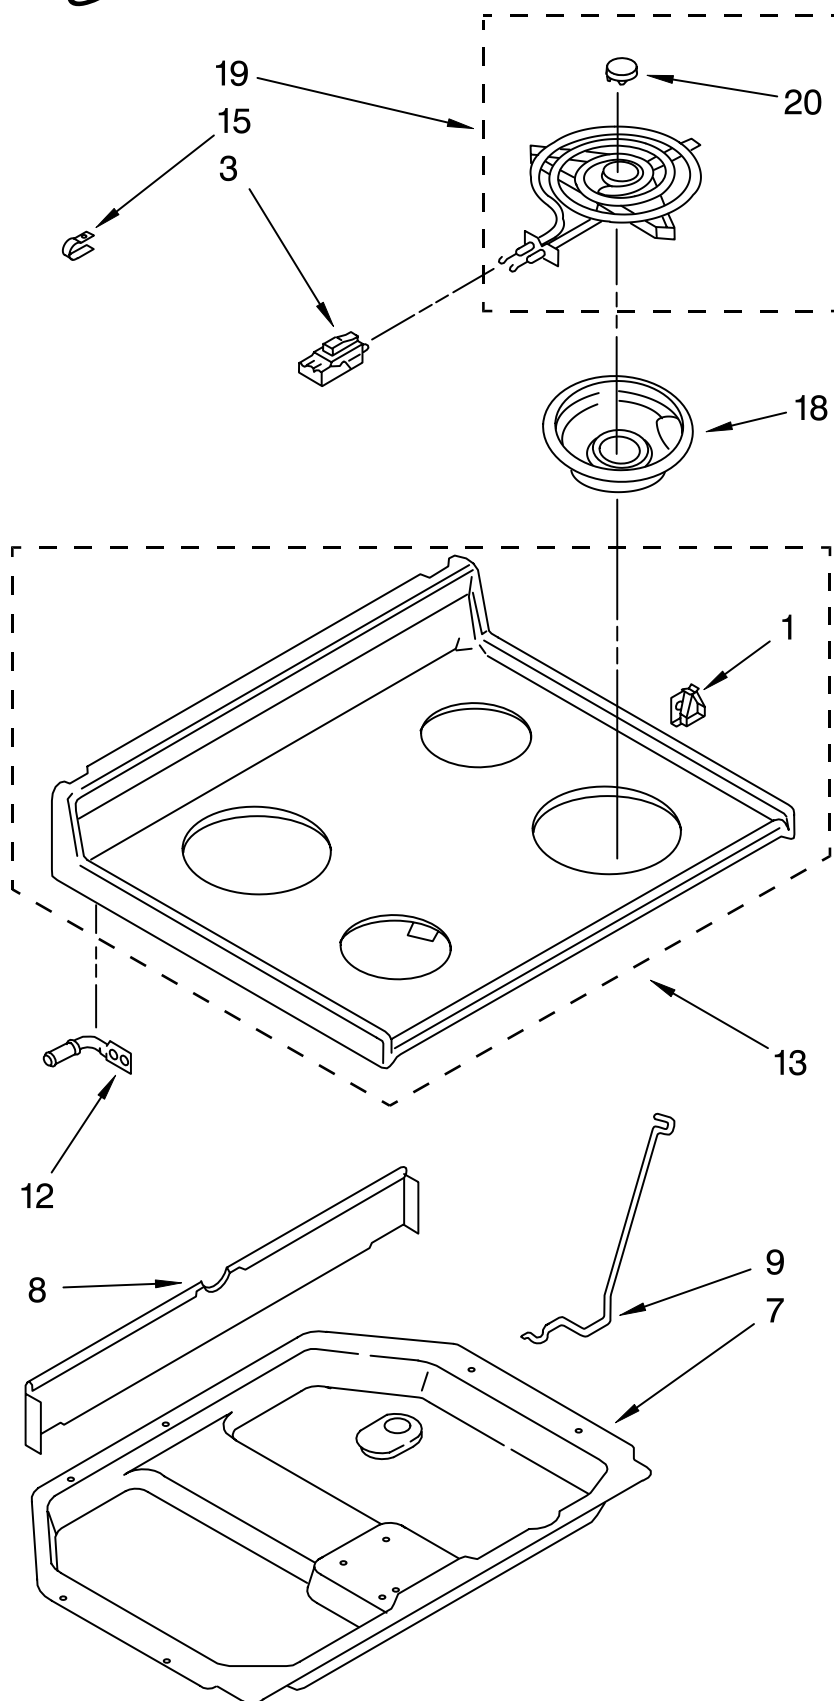

COOKTOP PARTS

For Model: RF315PXDW0, RF315PXDN0, RF315PXDQ0, RF315PXDZ0
(White) (Almond) (Designer White)(Designer Almond)

30" ELECTRIC
FREE STANDING
CONVENTIONAL
RANGE



Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3148790	Clip, Mtg. (4)
	487887	Screw
	814102	Nut
3	312606	Clip, Retainer (4)
	313808	Screw 6-32x9/32
7	3169186	Box, Burner
	309112	Screw, 10A x 3/8 (4)
8	307973	Shield, Wiring
	343641	Screw, 10-16 x 1/2 (4)
9	3148659	Rod, Cooktop (2)
12	3169384	Pin, Cooktop (2)
	343641	Screw, 10-16 x 1/2 (4)
13		Cooktop
	3170981	White
	3170982	Almond
	690989	Screw, 10-32 x 1/2
15	308605	Strain Relief
	343641	Screw, 10-16 x 1/2
18		Pan, Reflector 6" (2)
	3169204	White, Almond, & Designer Almond
	3150246	Designer White 8" (2)
	3169205	White, Almond, & Designer Almond
	3150247	Designer White
19		Unit, Surface
	660529	6" Element (2)
	660531	8" Element (2)
		(Includes Illus. 20)
20	309195	Medallion (4)

FOLLOWING PARTS NOT ILLUSTRATED


LITERATURE PARTS

LIT3187321	Installation Instructions
LIT3150400	Installation Instr (Templet)
LIT3169511	Tech Sheet
LIT3189078	Use & Care Guide

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Model: RF315PXDW0, RF315PXDN0, RF315PXDQ0, RF315PXDZ0
(White) (Almond) (Designer White)(Designer Almond)

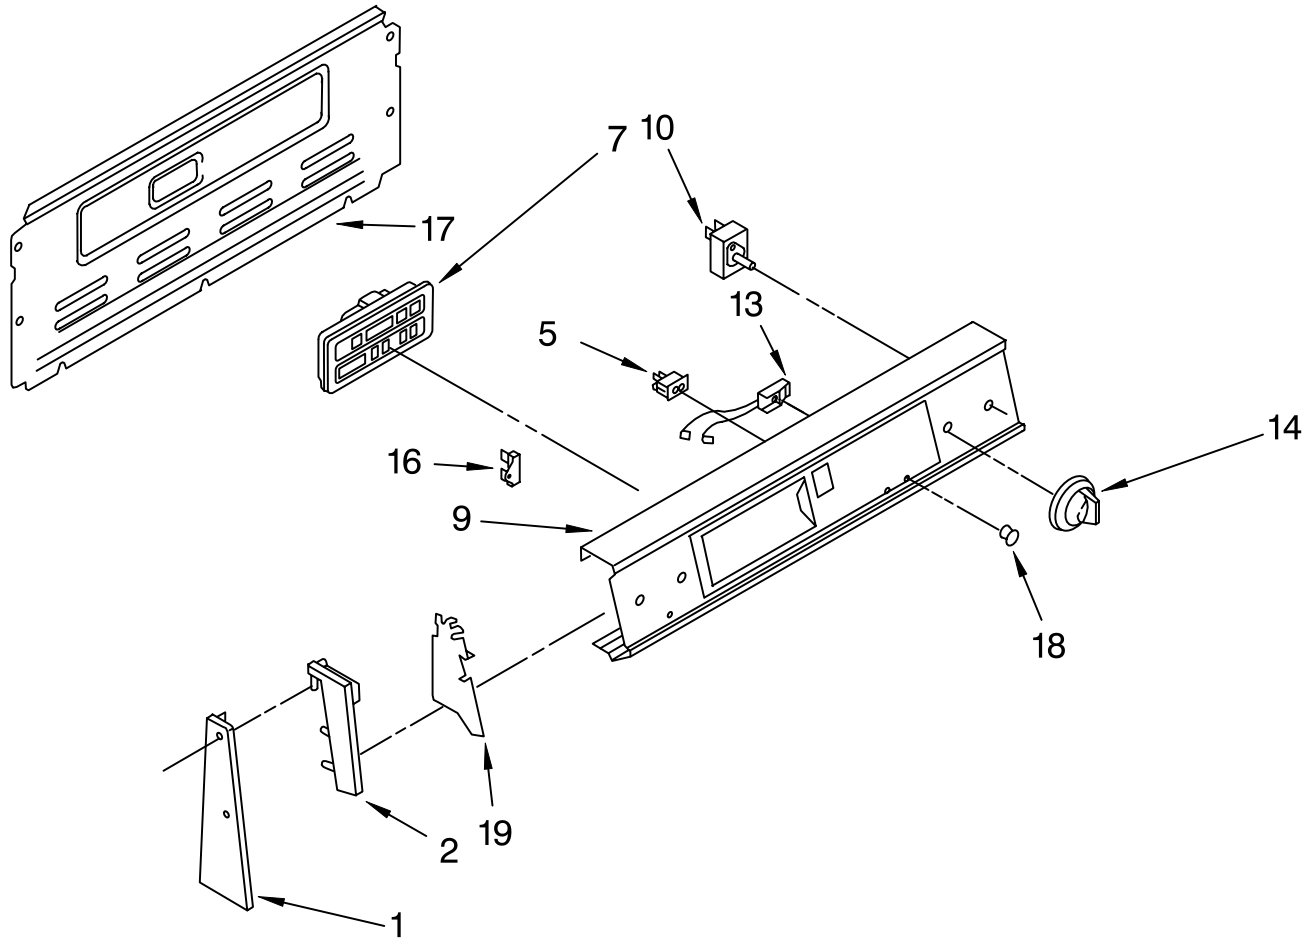

Illus. Part No. DESCRIPTION

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1
3187671 Black
3188992 Designer White
3169468 Designer Almond
End Trim L.H.
3187672 Black
3188993 Designer White
3169469 Designer Almond
End Cap R.H.
3187791 Black
3187793 Designer White
3187795 Designer Almond
End Cap L.H.
3187792 Black
3187794 Designer White
3187796 Designer Almond

Illus. Part No. DESCRIPTION

5
3182717 Switch, Rocker
3182718 Black
3182719 Designer White
3182719 Designer Almond
7
3187780 Timer, ERC Control
3187781 Black
3187781 Designer White
3187782 Designer Almond
9
3189219 Panel, Control
3189219 Black
3188683 Designer White
3188684 Designer Almond
3169366 Screw,
8-18 x 5/8 (4)
10
3148951 Switch, Infinite
3148951 6" Unit (2)
3148953 8" Unit (2)
308119 Screw,
8-32 x 1/4 (8)


Illus. Part No. DESCRIPTION

13
3169457 Indicator Light (2)
14
3188721 Knob, Infinite (4)
3188721 Black
3188722 Designer White
3188723 Designer Almond
16
3187848 Fuse, Thermal
98520 Screw
17
3187332 Rear Cover
Control Panel
343641 Screw,
10-16 x 1/2 (8)
18
313101 Lens, Amber (2)
19
313608 Shield, Glass (2)
246132 Screw,
8A x 3/8 (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UNIT PARTS

For Model: RF315PXDW0, RF315PXDQ0, RF315PXDZ0
(White) (Almond) (Designer White)(Designer Almond)

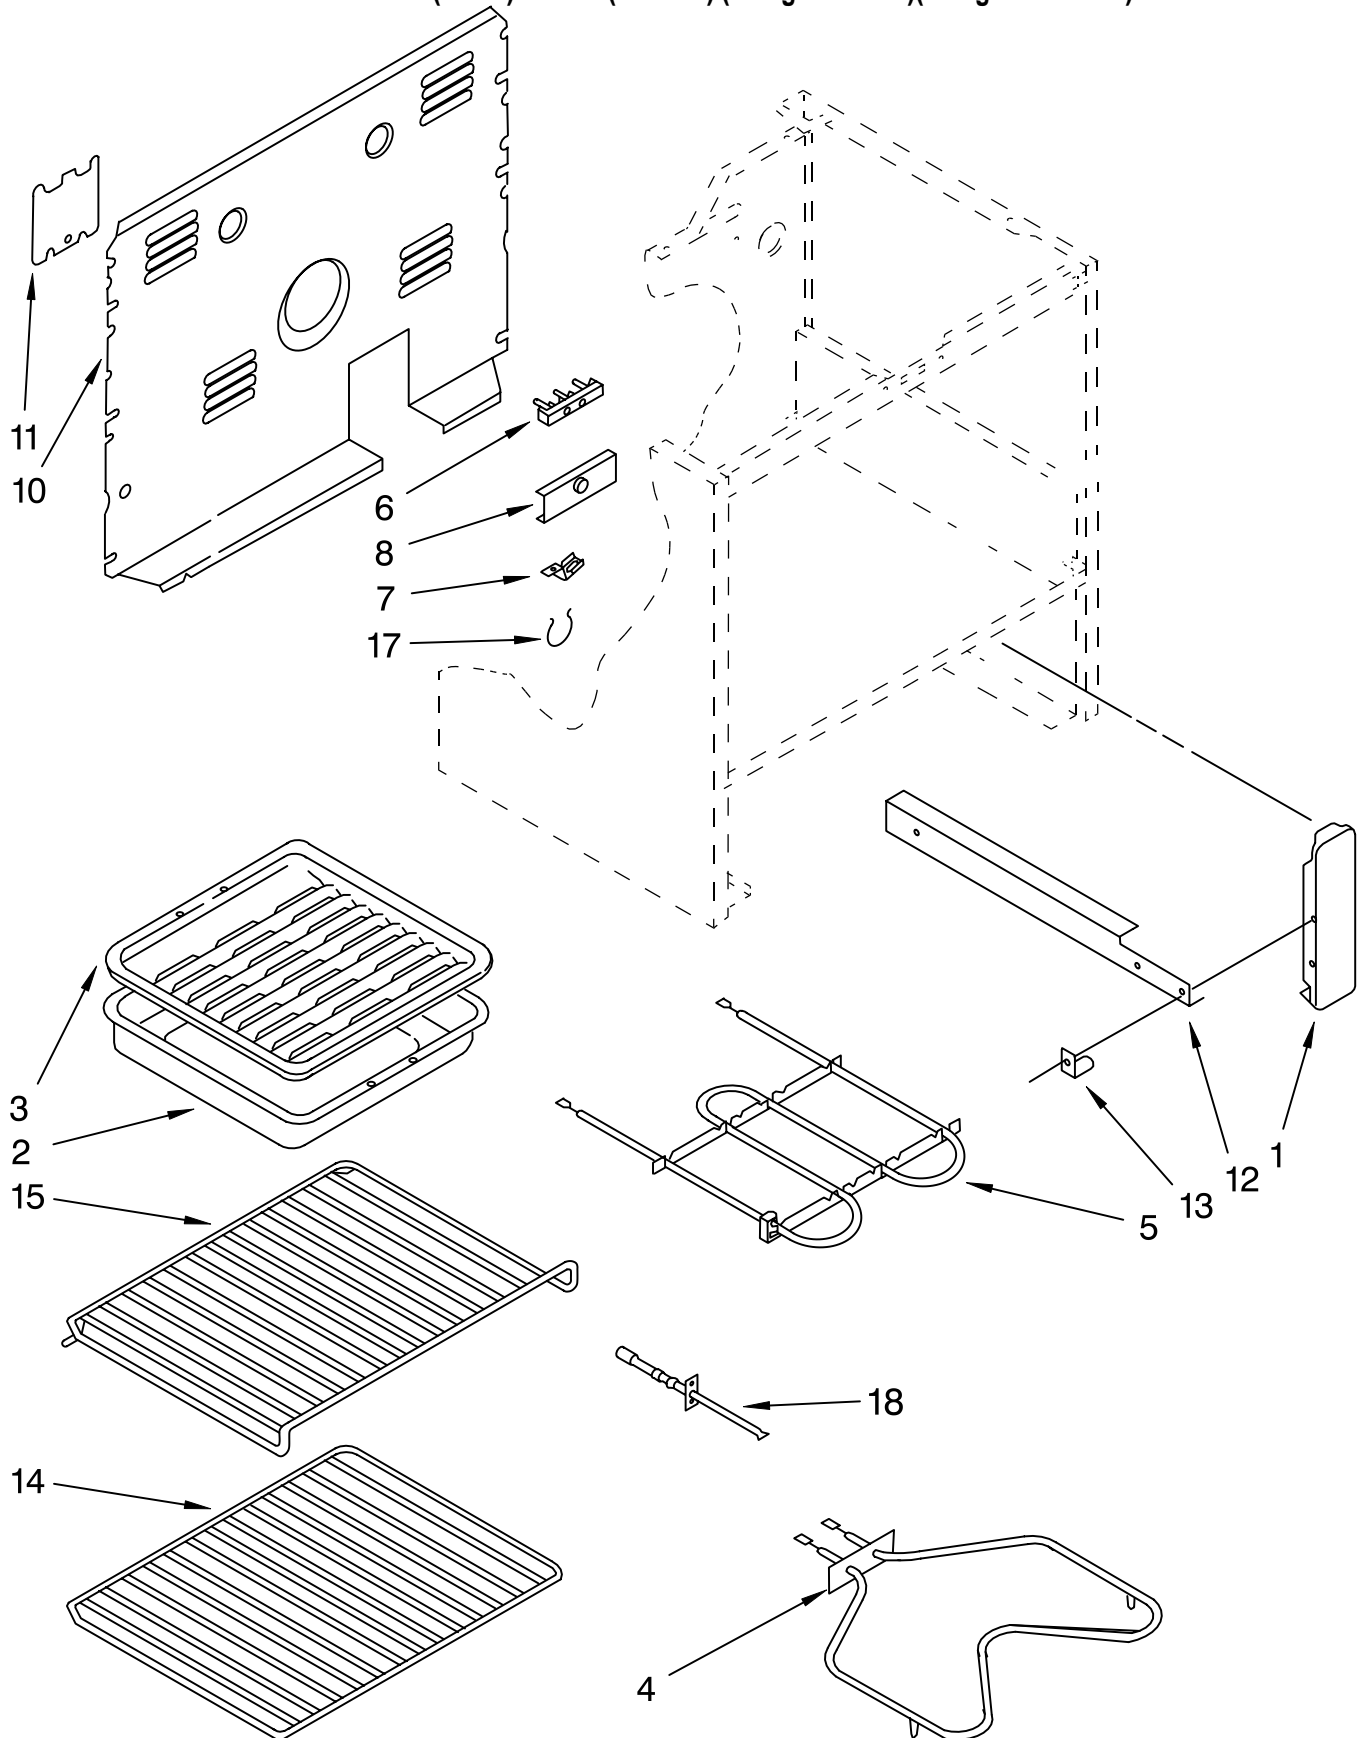

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UNIT PARTS

For Model: RF315PXDW0, RF315PXDNO, RF315PXDQ0, RF315PXDZ0
(White) (Almond) (Designer White)(Designer Almond)

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3169420	Bracket, Mounting (2)
2	3169076	Pan, Broil
3	3147563	Grid, Broiler
4	661170	Unit, Bake (240V)
	3150532	Screw, 10-32 x 7/16 (2)
5	660579	Unit, Broil
	311714 (Alt.)	
	311713 (Alt.)	
	3150532	Screw, 10-32 x 7/16 (2)
6	258076	Terminal Block
	98884	Screw, 10-16 x 1 (2)
	112432	Nut (6)
7	308498	Ground Strap
	313660	Clip
	690989	Screw, 10-32 x 1/2
8	3150190	Bracket, Service
	343641	Screw, 10-16 x 1/2 (2)
10	3148975	Cover, Rear
	343641	Screw, 10-16 x 1/2 (7)
11	307972	Cover, Service
	343641	Screw, 10-16 x 1/2 (2)
12		Rail, Drawer
	3149256	L.H.
	3149255	R.H.
13	3149257	Glide, Drawer (2)
14	308173	Rack, Oven (Straight)
15	308172	Rack, Offset
17	313438	Clip, Harness
18	3148440	Sensor, Temperature
	98520	Screw (2)


Following Parts Not Illustrated

309961	Insulation, Oven Wrap
814091	Anti-Tip Kit

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Model: RF315PXDW0, RF315PXDN0, RF315PXDQ0, RF315PXDZ0
(White) (Almond) (Designer White)(Designer Almond)

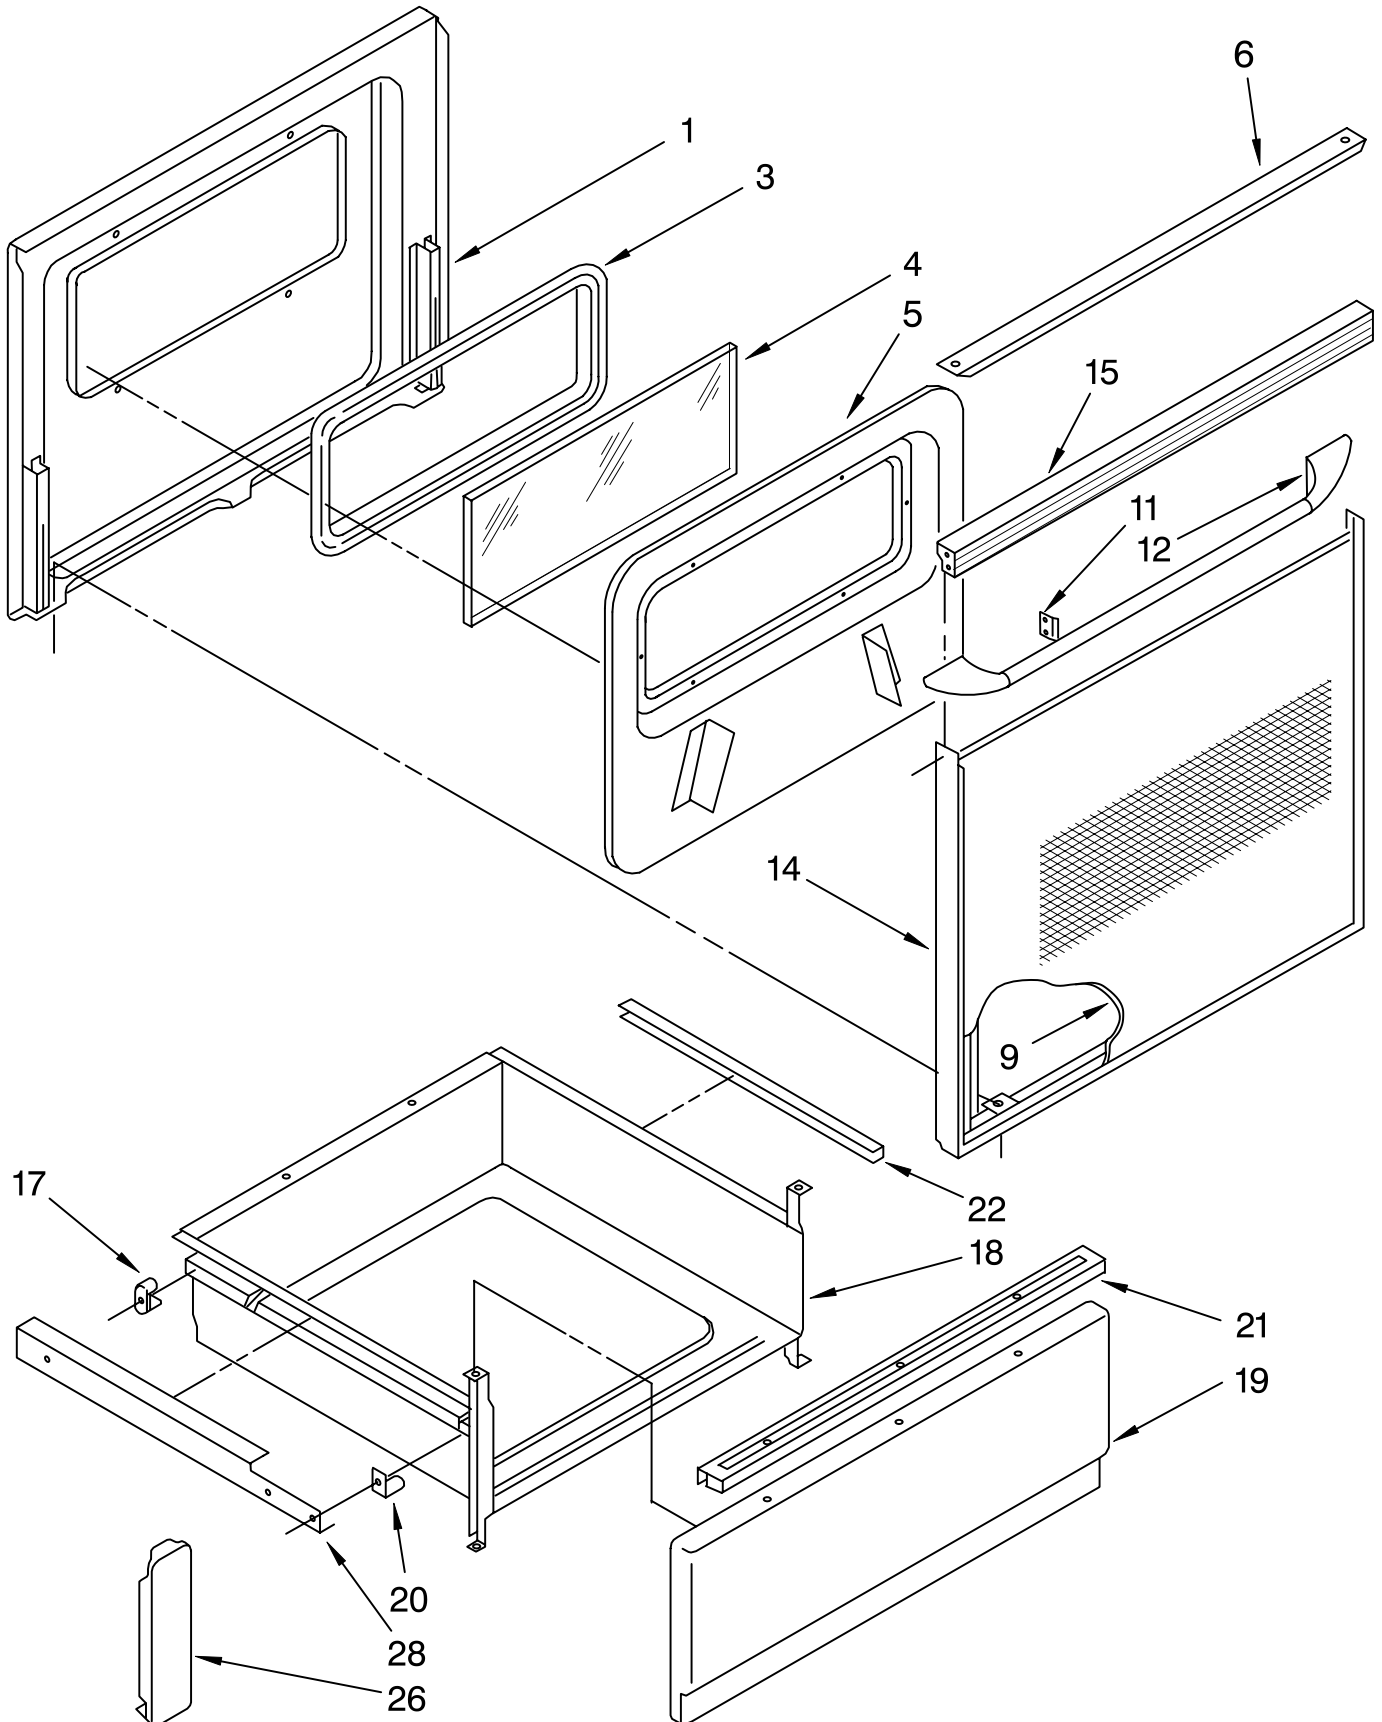

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS


For Model: RF315PXDW0, RF315PXDNO, RF315PXDQ0, RF315PXDZ0
(White) (Almond) (Designer White)(Designer Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			11	3148282	Clip (2)	18	327887	Drawer, Utility
			12		Handle, Door	19		Panel Drawer
				3169474	Screw (2)		3169422	White
				3188695	Black		3169423	Almond
				3188696	Designer White		313349	Screw,
				3188697	Designer Almond			8-18 x 1/2
1	3172220	Liner, Door	14		Frame, Door	20	3149257	Glide, Front (2)
3	3148183	Seal, Glass		3188997	Black		307748	Screw,
4	3169202	Glass, Inner		3149253	Screw, Side (4)			10A x 1/2 (2)
5	3148287	Retainer,		3149333	Screw, Bottom (3)	21		Handle, Drawer
	3185647	Screw,		3188998	Designer White		3169473	White
		8-18 x 3/8 (6)		3188403	Screw, Side (4)		3169472	Almond
6		Cap, Top (Designer Models Only)		3185918	Screw, Bottom (3)	22	309329	Protector, Drawer (2)
	3189001	Designer White		3188999	Designer Almond	26	3169420	Bracket, Rail (2)
	3188399	Screw (2)		3188404	Screw, Side (4)	28		Rail, Slide
	3189002	Designer Almond		3185918	Screw, Bottom (3)		3149255	R.H.
	3188400	Screw (2)	15		Door Top, Vent		3149256	L.H.
9		Outer Glass		3188692	Black			(Includes No. 20)
	3188739	Black		3188693	Designer White		307748	Screw (2)
	3188738	Designer White		3188694	Designer Almond			
	3189263	Designer Almond	17	307980	Glide, Rear			
				3393008	Screw, (2)			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Model: RF315PXDW0, RF315PXDN0, RF315PXDQ0, RF315PXDZ0
(White) (Almond) (Designer White)(Designer Almond)

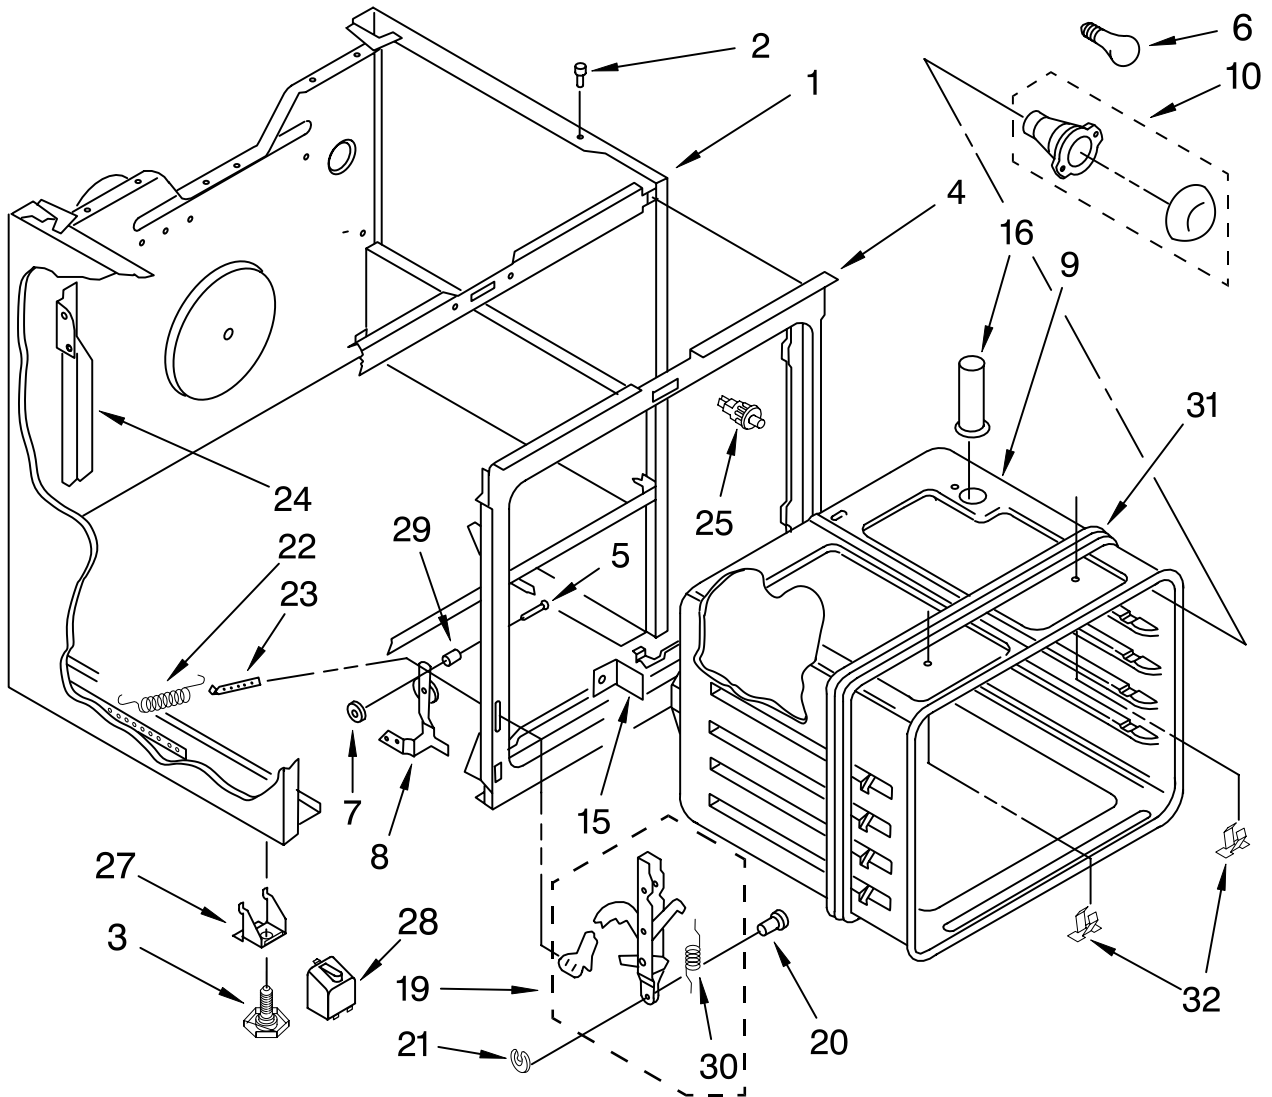

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS


For Model: RF315PXDW0, RF315PXDZ0, RF315PXDQ0, RF315PXDZ0
(White) (Almond) (Designer White)(Designer Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			7	308306	Pushnut	22	308127	Spring, Oven Door (2)
			8	3176710	Hinge, R.H.	23	308125	Anchor, Spring (2)
				3176711	Hinge, L.H.	24		Support, Channel
				343641	Screw, 10-16 x 1/2 (4)		313196	L.H.
1		Main Chassis	9	3176611	Oven (30" Conv)		313197	R.H.
	330086	White		311056	Screw (2)		343641	Screw, 10-16 x 1/2 (4)
	330090	Almond	10	3150537	Screw	25	310345	Switch, Door
	690989	Screw, 10-32 x 1/2	15	3150505	Socket, Oven Light	27	3169418	Support, Foot (2)
2	238614	Bumper, Cooktop (2)		311220	Bracket, Oven Mounting		343641	Screw (2)
3	3169499	Leg Leveling (4)		343641	Screw, 10-16 x 1/2 (4)	28	3169448	Cover, Foot (2)
4	3176714	Frame, Front	16	3169143	Vent, Oven	29	309111	Snubber, Door (2)
	343641	Screw, 10-16 x 1/2 (13)		307748	Screw, 10A x 1/2 (2)	30	308207	Spring, Door Stop
5	307985	Pin, Hinge	19	3176708	Channel, Arm (2)	31	3169283	Seal, Rubber
6	311255	Bulb, Light	20	307986	Hinge Pin (2)	32	3169107	Plug, Button (2)
			21	307594	Ring, Retainer (2)			



FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Model: RF315PXDW0, RF315PXDN0, RF315PXDQ0, RF315PXDZ0
(White) (Almond) (Designer White)(Designer Almond)

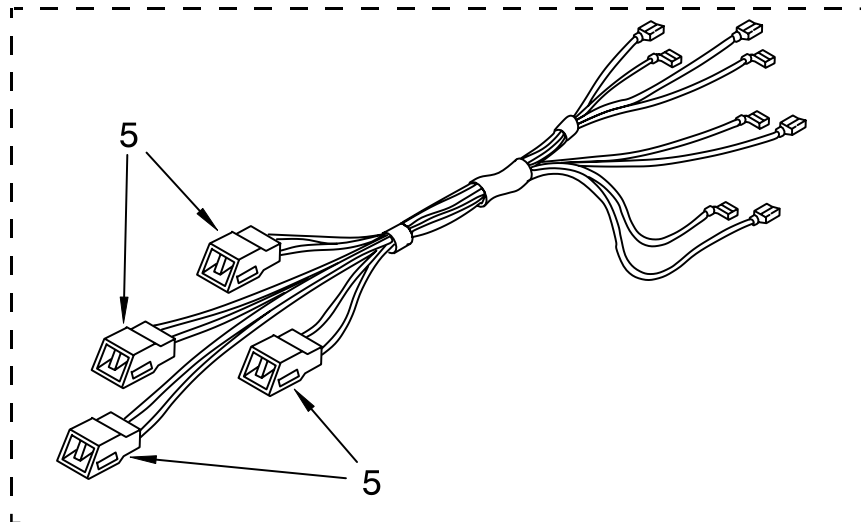

Illus. No.	Part No.	DESCRIPTION
1	3149881	Wiring Harness (Surface Unit)
2	3169541	Wiring Harness (Oven)
4	313154	Wiring Harness (Oven Light)
5	330031	Receptacle

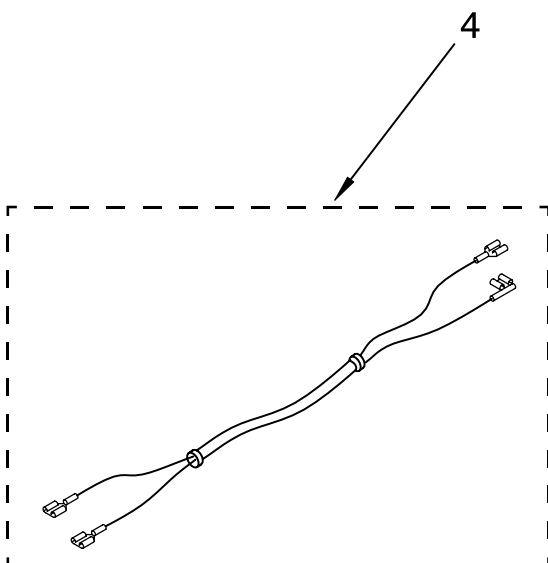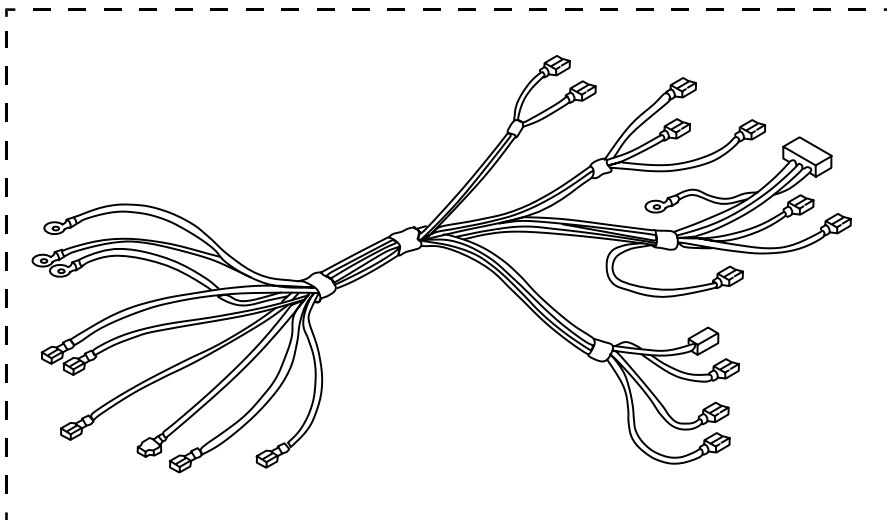

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LITERATURE AND OPTIONAL PARTS

For Model: RF315PXDW0, RF315PXDN0, RF315PXDQ0, RF315PXDZ0
(White) (Almond) (Designer White)(Designer Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
<u>SPLICING WIRES--25FT. LENGTH</u>			<u>PAINT, TOUCH-UP (1/2oz.)</u>			<u>REFINISHING MATERIAL</u>		
	242828	Wire, Black 12 Ga. 150 °c			Paint, Touch-Up 1/2 oz.		799832	Kit, Porcelain Repair (White)
	242820	Wire, Black 14 Ga. 150 °c		72017	White		242756	Touch-Up Self-Clean (1/2 Pt.)
	242821	Wire, Blue 14 Ga. 150 °c		72107	Almond		261582	Grease
	242822	Wire, Brown 14 Ga. 150 °c		72109	New Avocado	<u>INSULATION</u>		
	242830	Wire, Brown 14 Ga. 200 °c		72108	Coffee		261514	Insulation, Fiberglass (1-1/2" x 24" x 120"
	242823	Wire, Green 14 Ga. 150 °c		72110	Harvest Gold		240132	Insulation, Fiberglass (2-1/2" x 22" x 120"
	242824	Wire, Orange 14 Ga. 150 °c		72112	Toast		241430	Foil, Aluminum Oven (18" x 25')
	242829	Wire, Red 12 Ga. 150 °c		72113	Platinum	<u>ANTI-TIP KIT</u>		
	242825	Wire, Red 14 Ga. 150 °c		**511873	White Porcelain (2 Oz.)		814234	Wall Mount
	242831	Wire, Red 14 Ga. 200 °c	<u>PAINT, PRESSURIZED SPRAY (13 oz.)</u>			<u>Following May Be Purchased</u>		
	242826	Wire, White 14 Ga. 150 °c		350930	White	<u>DO-IT-YOURSELF REPAIR MANUALS</u>		
	242827	Wire, Yellow 14 Ga. 150 °c		350956	Almond		LIT677973	Manual, Range (Do-It-Yourself)
	242832	Wire, Yellow 14 Ga. 200 °c		261888	New Avocado			
				261886	Coffee			
				261890	Harvest Gold			
				285365	Toast			
				285366	Platinum			
				285006	Superior Black			
				206922	Primer (White)			
				206925	Leveler (Thinner) (2 oz.)			
					Paint, Bulk 1 Qt.			
			<u>PAINT, BULK (1 qt.)</u>					
				799344	White (Uncut)			
				978883	Almond (Uncut)			
				261891	Harvest Gold (Uncut)			
				285367	Toast (Uncut)			
				285368	Platinum (Uncut)			
			**Note: Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.					

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST